



Important!

1. When you receive your Rollaway check contents for any freight damage or defect.
2. If this is a Custom Order the size will be in the outside of the box. Check this is correct.
3. Advise Newline on 0508 639 5463 if any damage has occurred or questions on the size within 8 hours of receiving the goods so this is can rectified.
4. Do not install any faulty product as this will invalidate later claims.

DOOR SET / IMPORTANT INFORMATION

WARRANTY

- Faulty goods are covered under warranty for 5 years. Visit www.newline.co.nz for warranty information.
- Breakages incurred during construction are not covered under warranty.
- Installations must conform to the instructions to be covered by the warranty.

HEALTH AND SAFETY


Installation:

- Determine positioning of wiring and piping within wall cavities before shower installation. Mark their positions to ensure electrical and piping areas are avoided.
- Ensure Adhesive bonding and silicone bonds have been completed to make safe the install.
- Wear appropriate protective clothing and eye protection during installation.

MATERIALS REQUIRED


- Cartridge of NG translucent Silicone (Not supplied)

TOOLS REQUIRED

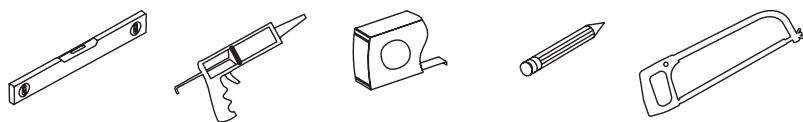


AFTERCARE

- Regularly clean with mild non-abrasive detergent and microfiber cloth. Rinse off and dry.
- Lubricate top and bottom rails with spray silicone
- Inside of canister has a swinging door. Clip open and clean wiper as diagram A.

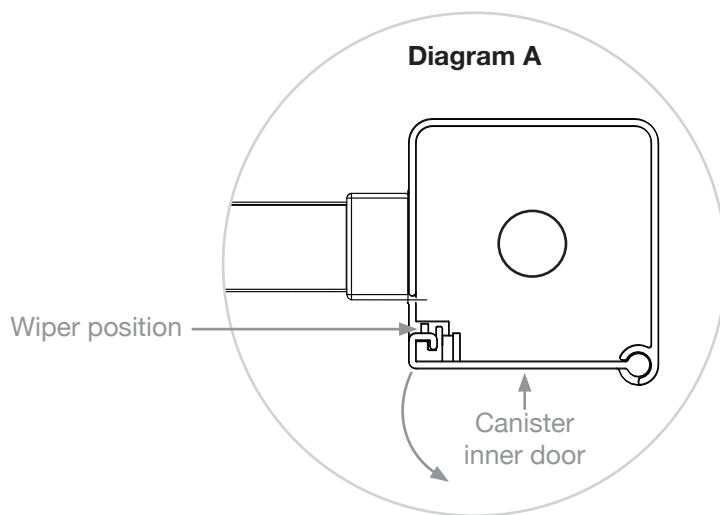

NEWLINE RECOMMENDS A SKILLED TRADESMAN ACQUAINTED WITH SHOWER INSTALLATIONS TO ENSURE THE VERY BEST OUTCOME.

EXPLODED VIEW

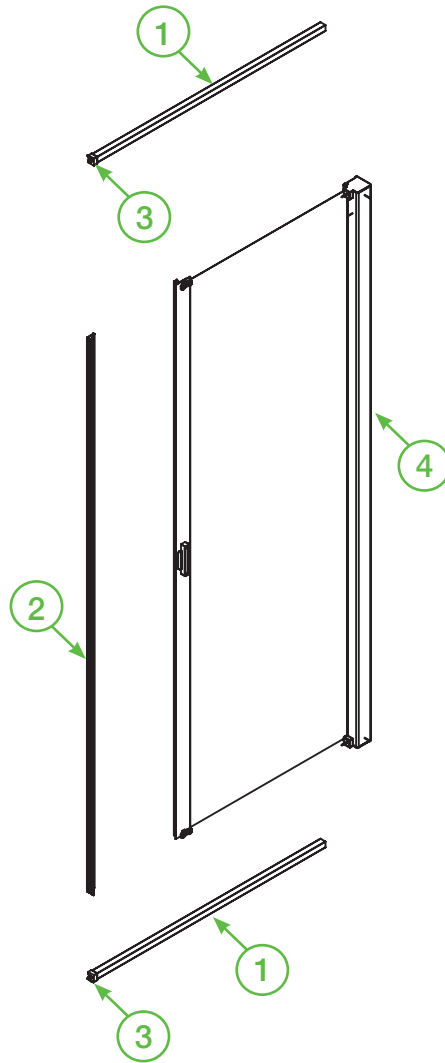

ROLLAWAY COMPONENT LIST

Part Number	QTY
1 Aluminium Rollaway Track 865mm White	2
2 Aluminium Wall Jamb 1795mm White	1
3 Track End caps	2
4 Canister / Screen Assembly	1

NOTE:

These component items provide the maximum width of 925mm. Installations steps will show how to establish your specific distance across the shower screen.


INSTALLATION

PLEASE NOTE:

1. Where possible fit canister on same side as shower head
2. Plastic moulded handles face to outside of shower.
3. Maximum width is 925mm but can installed to any lesser width required by cutting the tracks down to length.
4. Thoroughly clean area where Rollaway is to be installed. Finish with a non-residual cleaner.

LAYOUT STEPS

- Bottom Track: Position at DROP-DOWN point or where there is SIGNIFICANT SLOPE to guide water inwards. Mark inner line (Red dotted line as Diagram B)
- Place canister on wall: Match TRACK INNER LINE to TRACK MOUNT. Plumb and mark this side on wall.
- Wall Jam: On opposite wall, align the INNER ANGLE of wall jam to TRACK INNER LINE. Plumb and mark this up the wall.

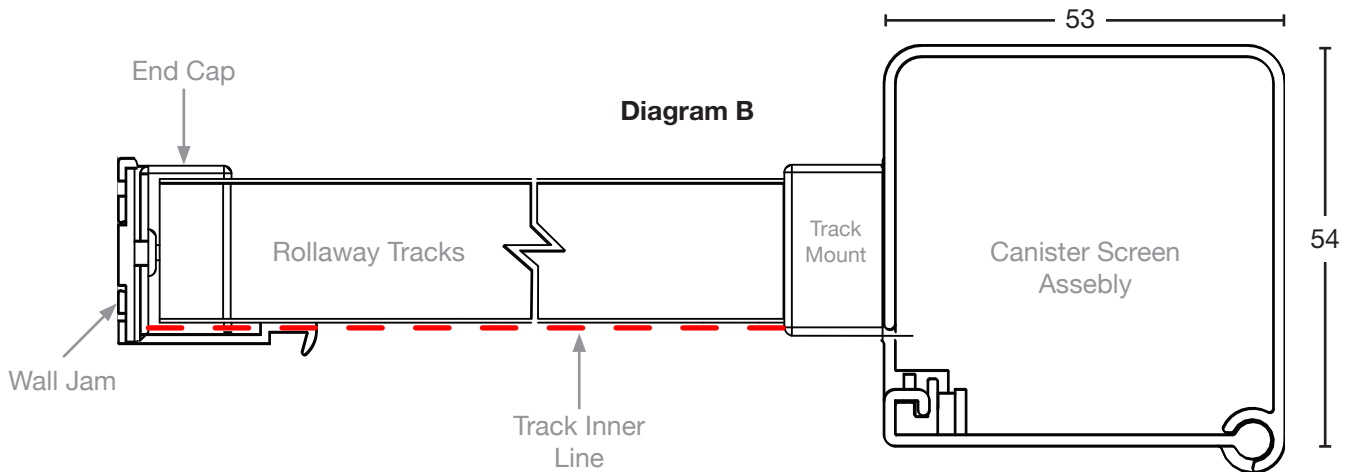

INSTALLATION STEPS

1. Peel cover strip off double sided tape on canister. IMPORTANT: Do not allow exposed adhesive tape to touch wall until aligned to wall marking. Apply strong pressure from top to bottom to fully activate adhesive.
2. Repeat same procedure for opposite wall jam.
3. Specific measurement for top and bottom horizontal rails: Inner face of canister to wall jam less 5mm clearance for square mount and end cap.
4. Tape rails prior if cutting to protect against scratches. Cut the two rails to at their calculated lengths and file burrs.
5. Slide rails into rollers, fit to canister "Track Mount", attach "Track End Caps", click into button on wall jam.
6. Silicone seal outside joints: Apply down both vertical sides, around canister base and across bottom rail. Allow 24hrs to cure.

CONTACT

NEWLINE
for a lifetime!

Freephone: 0508 639 5463

Phone: 09 444 2053

Email: info@newline.co.nz

www.newline.co.nz