



Important

1. When you receive your Mirror package, check contents for any freight damage or defect.
2. Advise Newline on 0508 639 5463 if any damage has occurred or questions on the size within 8 hours of receiving the goods so this can be rectified.
3. Do not install any faulty product as this will invalidate later claims.

BEFORE YOU START



1. When you receive your mirror, please check that the type/size is correct and free of freight damage.
2. Check for blemishes from outside of mirror edge and 25mm inwards to ensure there is no fault.
3. Advise your supplier of Newline products of any fault within 12 hours of receiving goods.
4. Installation of incorrect, damaged, or faulty mirrors will not have a valid warranty.

HEALTH AND SAFETY




1. Prior to drilling into a wall, ensure that it is clear from electrical wires and water pipes.
2. Always stand mirror glass up after unpacking the components and use soft packing where in contact with hard surfaces. Take care not to strike an edge or corner on a hard surface.
3. Support mirrors bonded to the wall from slumping or falling out until adhesive has cured.
4. Wear protective gloves and eye protection.

WARRANTY

- This covers product defect for 2 years. Visit **newline.nz** for information.
- Breakage/damage on site is not covered under warranty.
- The bathroom must provide active ventilation that meets NZ Building Code - clause.
- Installation must conform to these instructions for the warranty to apply.

TOOLS & MATERIALS REQUIRED (available from your local retailer)

- 3M Scotch Indoor double-sided mounting tape. Must be white in 25mm wide x 1.5mm thick.
- Selly's Liquid Nails: Mirror-Metal-Glass (NOTE: This is a Clear Adhesive).
- The bathroom must provide active ventilation that meets NZ Building Code - clause.
-  Don't use regular Selly's Liquid nails or a clear acid cure silicone as it will damage silvered backing.

General: Cleaning cloth, soft pencil & spirit level.

PREPARATION/DETAILING

- The wall must be flat and a suitable substrate and preferably a cured painted surface to protect the mirror backing while installing.

MIRRORS OVER VANITIES

- It is required that the minimum gap the mirror is positioned above the Vanity Top is 16mm. This is to provide for ventilation at the back of the mirror and protect against a build of moisture at the base.

INSTALLATION

Direct To Wall

1. The vinyl film on the mirror back is for shatter protection. For direct gluing, peel the film off carefully starting with a fingernail at one corner and with an even pull to remove this.




Take extra care of silver red backing not to scuff or scratch as this may be irreversible .


2. Clean the rear of the mirror with cleaning cloth so it is free of dust and particles.
3. Using a soft pencil and level, gently mark the position where the mirror will be mounted on the wall. Ensure your measurements are correct and level.
4. Place the 3M Scotch Indoor mounting tape in strips on the rear of the mirror. More mounting tape will be required with larger mirrors.
5. Place mirror on the wall in position and press firmly into place to activate the tape adhesive. Use masking tape across the corners for additional hold until the glue has cured.

WHITE 3M SCOTCH
INDOOR TAPE

- Provides initial hold
- Establishes a 1.5mm anti-capillary gap

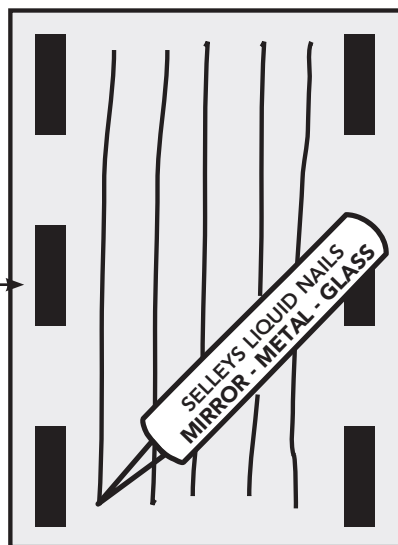

MASKING TAPE

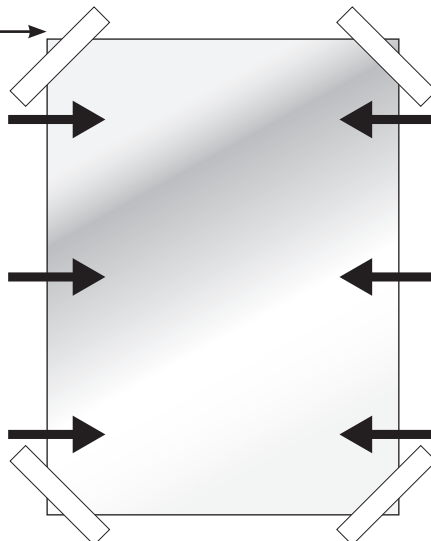

**DO NOT put Selleys
Liquid Nails Mirror - Metal
- Glass adhesive on vinyl
strips or close to double
sided tape.**

**Mirrors require support
while adhesive is curing.**
This is partially achieved
with the double sided tape
but additional support
underneath and tape
up to ensure there is no
movement.

CONTACT

NEWLINE
for a lifetime!

54 Unutoto Place, Tauriko, Tauranga, 3171

Freephone: 0508 639 5463 Phone: 09 444 2053

Email: info@newline.co.nz

newline.nz