

Important

1. When you receive your product check the contents for any freight damage or defects.
2. If this is a custom order, the size will be on the outside of the box. Check that it is correct.
3. Advise Newline on 0508 639 5463 if any damage has occurred or if you have any questions about the size within 8 hours of receiving the goods so this can be rectified.
4. Do not install faulty products, as this will void your warranty.

BEFORE YOU START

Newline provides full Specification Documents for two Categories of Showers.

WAIT

- **Before you start** please read through the pre-install guide that applies to this project.

Acrylic Pre-Install Specifications

Tile Pre-Install Specifications

HEALTH AND SAFETY




- **Unpack glass**, stand on soft packing on floor and walls prior to assembly.
- **Do not** rework glass panels.
- **Do not** strike an edge or corner of glass.
- **Use two persons** where heavy glass lifting is required.
- **Wear appropriate** protective clothing and eye protection during installation.
- **Mark gas/water pipe** and electrical wire locations to ensure these are not touched.

ATTENTION



- **The tray base** must be installed level as this affects all shower alignments.
- **Wall Specifications** require a max variation of 3mm within shower height. Installer must check the viability of install if outside of these specs.
- **3-Sided Alcove Showers:** Wall must be accurate, straight, and plumb. Refer pre-install guide.
- **Double studs for solid fixing of wall channels:** Positioned at tray outside edge and inwards so all shower configurations have the support required.
- **The Installers Responsibility:** The installation must comply with all council regulations.

Tools Required

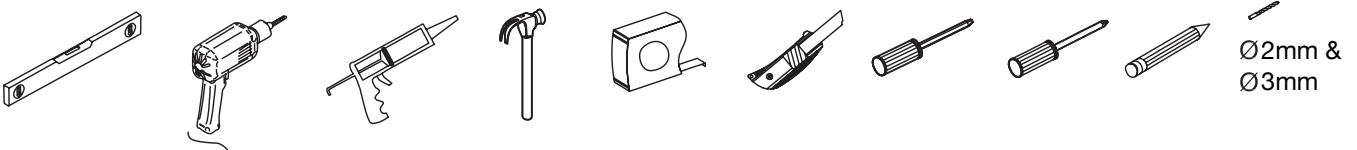

WARRANTY

- This covers faulty goods but not breakages. Visit newline.nz for information.
- Compliance with Specs and these instructions are essential for a valid warranty.

NEWLINE RECOMMENDS A SKILLED TRADESMAN ACQUAINTED WITH SHOWER INSTALLATIONS TO ENSURE THE VERY BEST OUTCOME.


Supplied Components

Glass panel (as per order)

Wall Channel

Screw & Cap set.

End Cap.

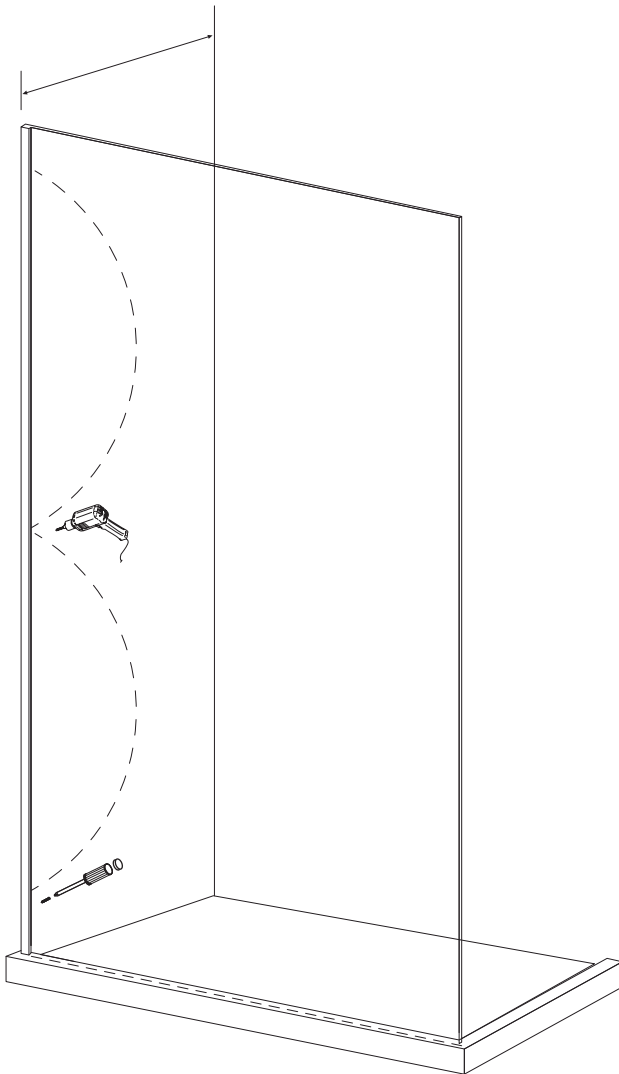

Two Fastening Categories: Wall channels.

1

Acrylic Tray & Walls

Drill 3 clearance holes for the screws centred to channels, one approx. 60mm from each end and one in the middle. Apply a bead of silicone down the back of the channel and screw in place keeping plumb.

2

Tile Tray & Walls

A full application of Bostik V60 to bond channel to wall. Clean off excess and leave a min of 24 hrs min to cure. Atmospheric Curing. 7mm in 7 days.

Install Glass to Wall Channel and to Tray

1. Enter Glass into the Wall Channel.
2. Packing may be required to level.
3. Screw glass frame to wall channel.
4. Silicone seal/bond as dotted line.



Allow 24 hours for silicone
to dry before use.