

## Important

1. When you receive your product check the contents for any freight damage or defects.
2. If this is a custom order, the size will be on the outside of the box. Check that it is correct.
3. Advise Newline on 0508 639 5463 if any damage has occurred or if you have any questions about the size within 8 hours of receiving the goods so this can be rectified.
4. Do not install faulty products, as this will void your warranty.

## PLEASE READ CAREFULLY

### Warranty

1. This covers faulty product. Check **newline.nz** for full details of warranty.
2. Any breakage on site will not be covered.
3. The installation must conform to these instructions for the warranty to apply.
4. Compliance with NZ Building code clause G4 on ventilation is required in a bathroom.
5. Aftercare details in these instructions must be adhered to (page 4).

### Health And Safety

- Provide support under wall hung units to simplify installation process.
- Determine positioning of wiring and piping within cavity walls. Mark their position to ensure you are protected and services are not damaged.

### Installation Type


Wall Hung Vanity Installation:

[Next Page](#)

### Materials required

- Masking tape
- Bathroom Silicone (wide adhesion features including plastics)
- Cleaning materials

### Tools & Fastenings Required

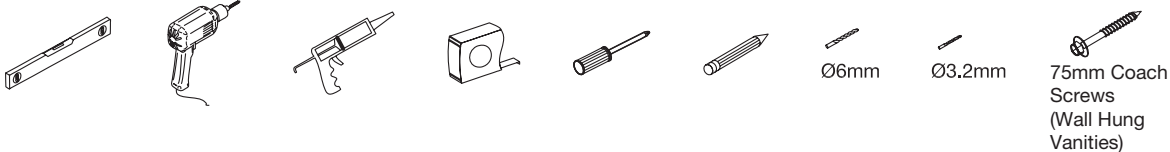

Complete tiling prior to vanity installation. Warranty claims don't cover renewal of wall finishings.

### IMPORTANT NOTICE! (To Both Installer and House Owner/Occupier)

All personnel have the responsibility to protect this vanity from damage including impacts or staining as outlined in Aftercare page 4.

### Vanity Installer

1. Establish solid fastening to the wall.
2. All joints in cabinet, to wall must be sealed.

### Plumber


1. Must be a registered plumber with all work to Building Code Compliance.
2. Hot water supply must not exceed 55 degrees.
3. Ensure the water pressure is balanced to the basin size to minimize water splash.
4. Seal all cabinet plumbing penetrations through the back wall of cabinet.

### House Owner/Occupier

1. Provide a ventilation system that complies with NZ Building Code G4.
2. Use ventilation when moisture vapour is present in the room.
3. Water or spills with the potential to stain must be cleaned up and dried off without delay.

VANITY CABINET & TOP IS WATERPROOF BUT SEAL JOINTS TO PROTECT STORED ITEMS WITHIN.

- 1 Mark the height (from 800mm to 900mm - owners choice) and locate top and bottom frame points to secure the unit.
- 2 **FASTENING TO THE WALL:** A wall hung vanity needs solid fixing for attachment to the wall. Provide this prior to fixing the wall lining.

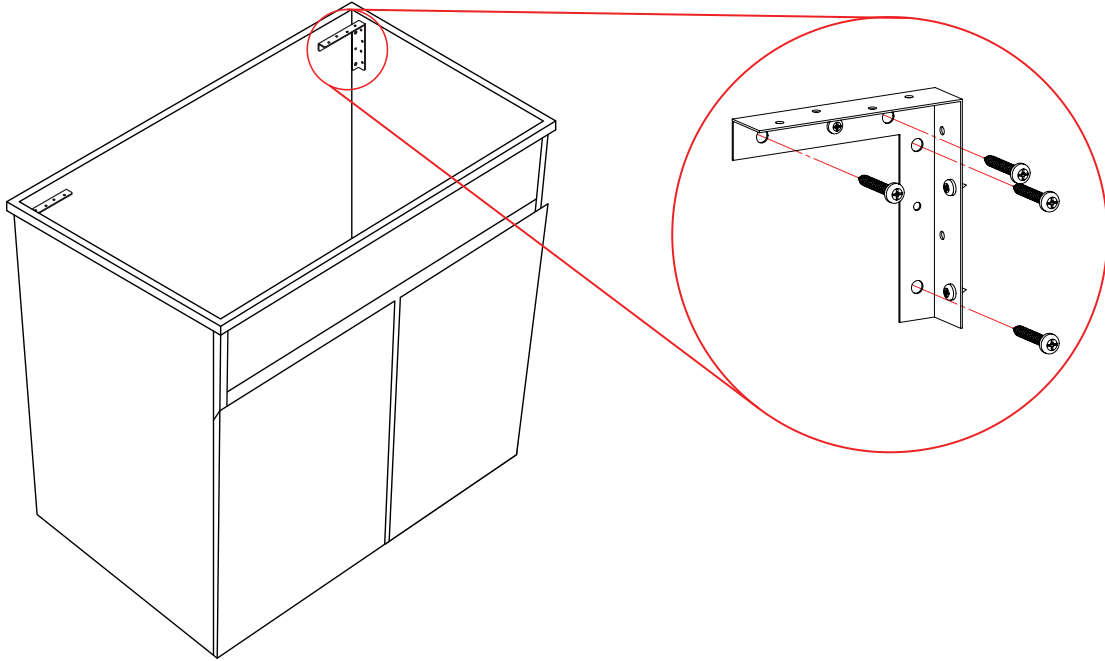

- 3 For installation of pipes it is easier to remove the doors.
- 4 Mark and drill holes required for the water and waste fittings.
- 5 Support the unit level at the desired height. Fasten into the frame with 75mm coach screws. Ensure no distortion occurs when fastening as this effect door alignments.
- 6 Install the plumbing fittings to meet industry standards. Water test the fittings. Use a registered plumber to complete this task.
- 7 Fit the top in place. This should be flush at the back with even overlaps on each side. Check for any rocking movement to the cabinet (mostly applies to VC tops). Support this movement and apply a bead of silicone to bond these together (Note: There is a 5mm tolerance in VC tops).
- 8 Replace and adjust the doors to alignment.
- 9 **SEAL ALL JOINS OF UNIT WITH SILICONE:** Vanity top onto cabinet, top and cabinet to wall

**NOTE: Warranty claims will be invalid if staining or damage occurs after installation.**

**DO NOT USE FOR 24 HOURS UNTIL SILICONE BOND HAS CURED.**

To comply with warranty requirements, please ensure the following aftercare procedures are regularly performed. Failure to comply to Warranty Aftercare Instructions will void warranty.

## **VITREOUS CHINA BASINS AND VANITY TOPS**

- Use warm soapy water or mild detergent and a soft or microfiber cloth. Rinse with clean water. and dry off with absorbent cloth.

## **VANITY CABINETS**

- Ensure the water pressure is regulated and balanced to the size of the basin to control water splash.
- The water temperature must be at a maximum of 55 degrees Celsius.
- The waste connections have been correctly installed by a licenced plumber.
- The bathroom must have a suitable ventilation system to remove moisture vapour.
- All cleaning of surfaces: Use a damp microfiber cloth with warm soapy water followed up by drying off with an absorbent cloth.
- Do not use abrasive or aggressive cleaners.

## **GENERAL**

A list of chemicals to avoid contact with the surfaces of your product: hair dyes or lacquers, mineral turps, white spirits, insecticides, nail polish or cleaner, bleaches, shoe polish, mercurochrome, iodine, solvents, alcohol, citrus based chemicals, bath oils, bath salts, kerosene. This is by no means comprehensive but indicative of chemical harm that must be avoided.